



N46VZ Repair Guide

N46VZ/ VM R2.0

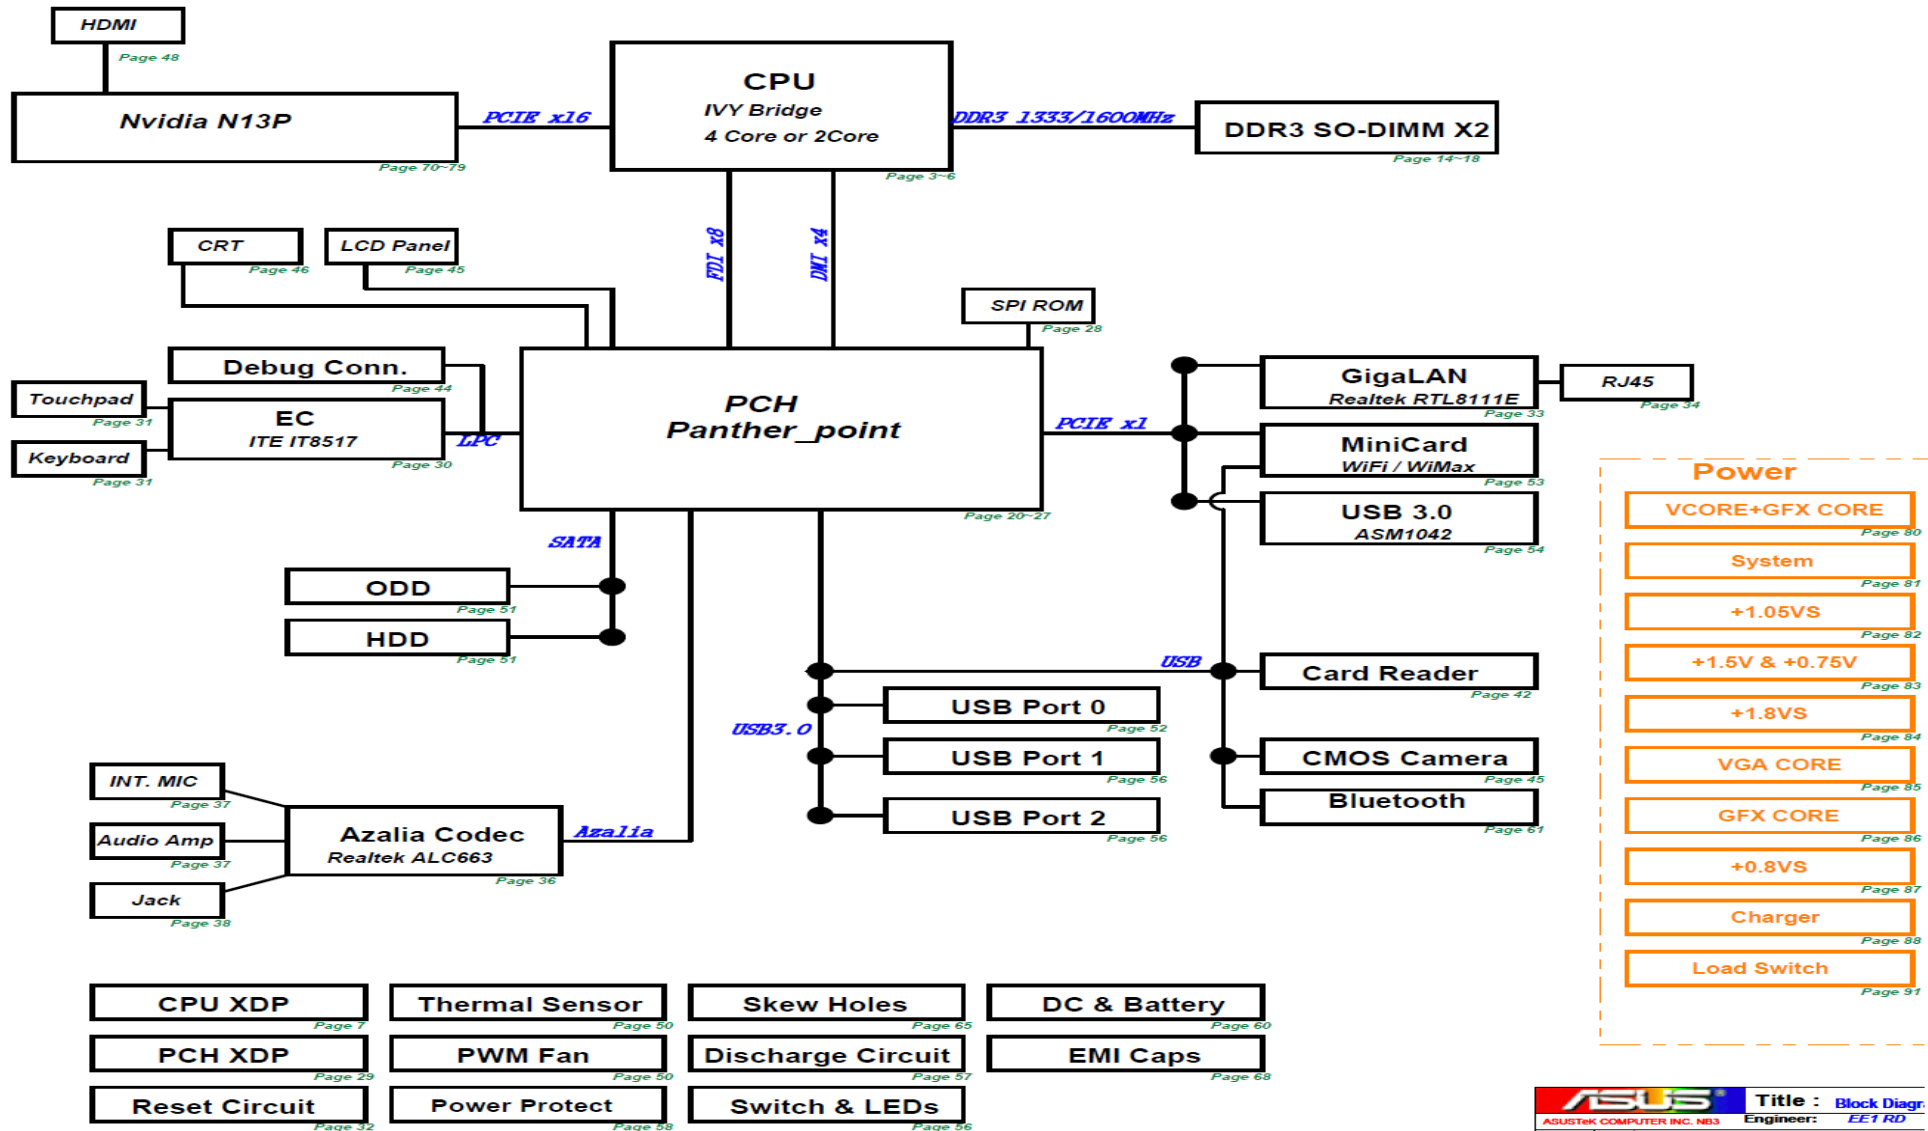

POWER FLOW

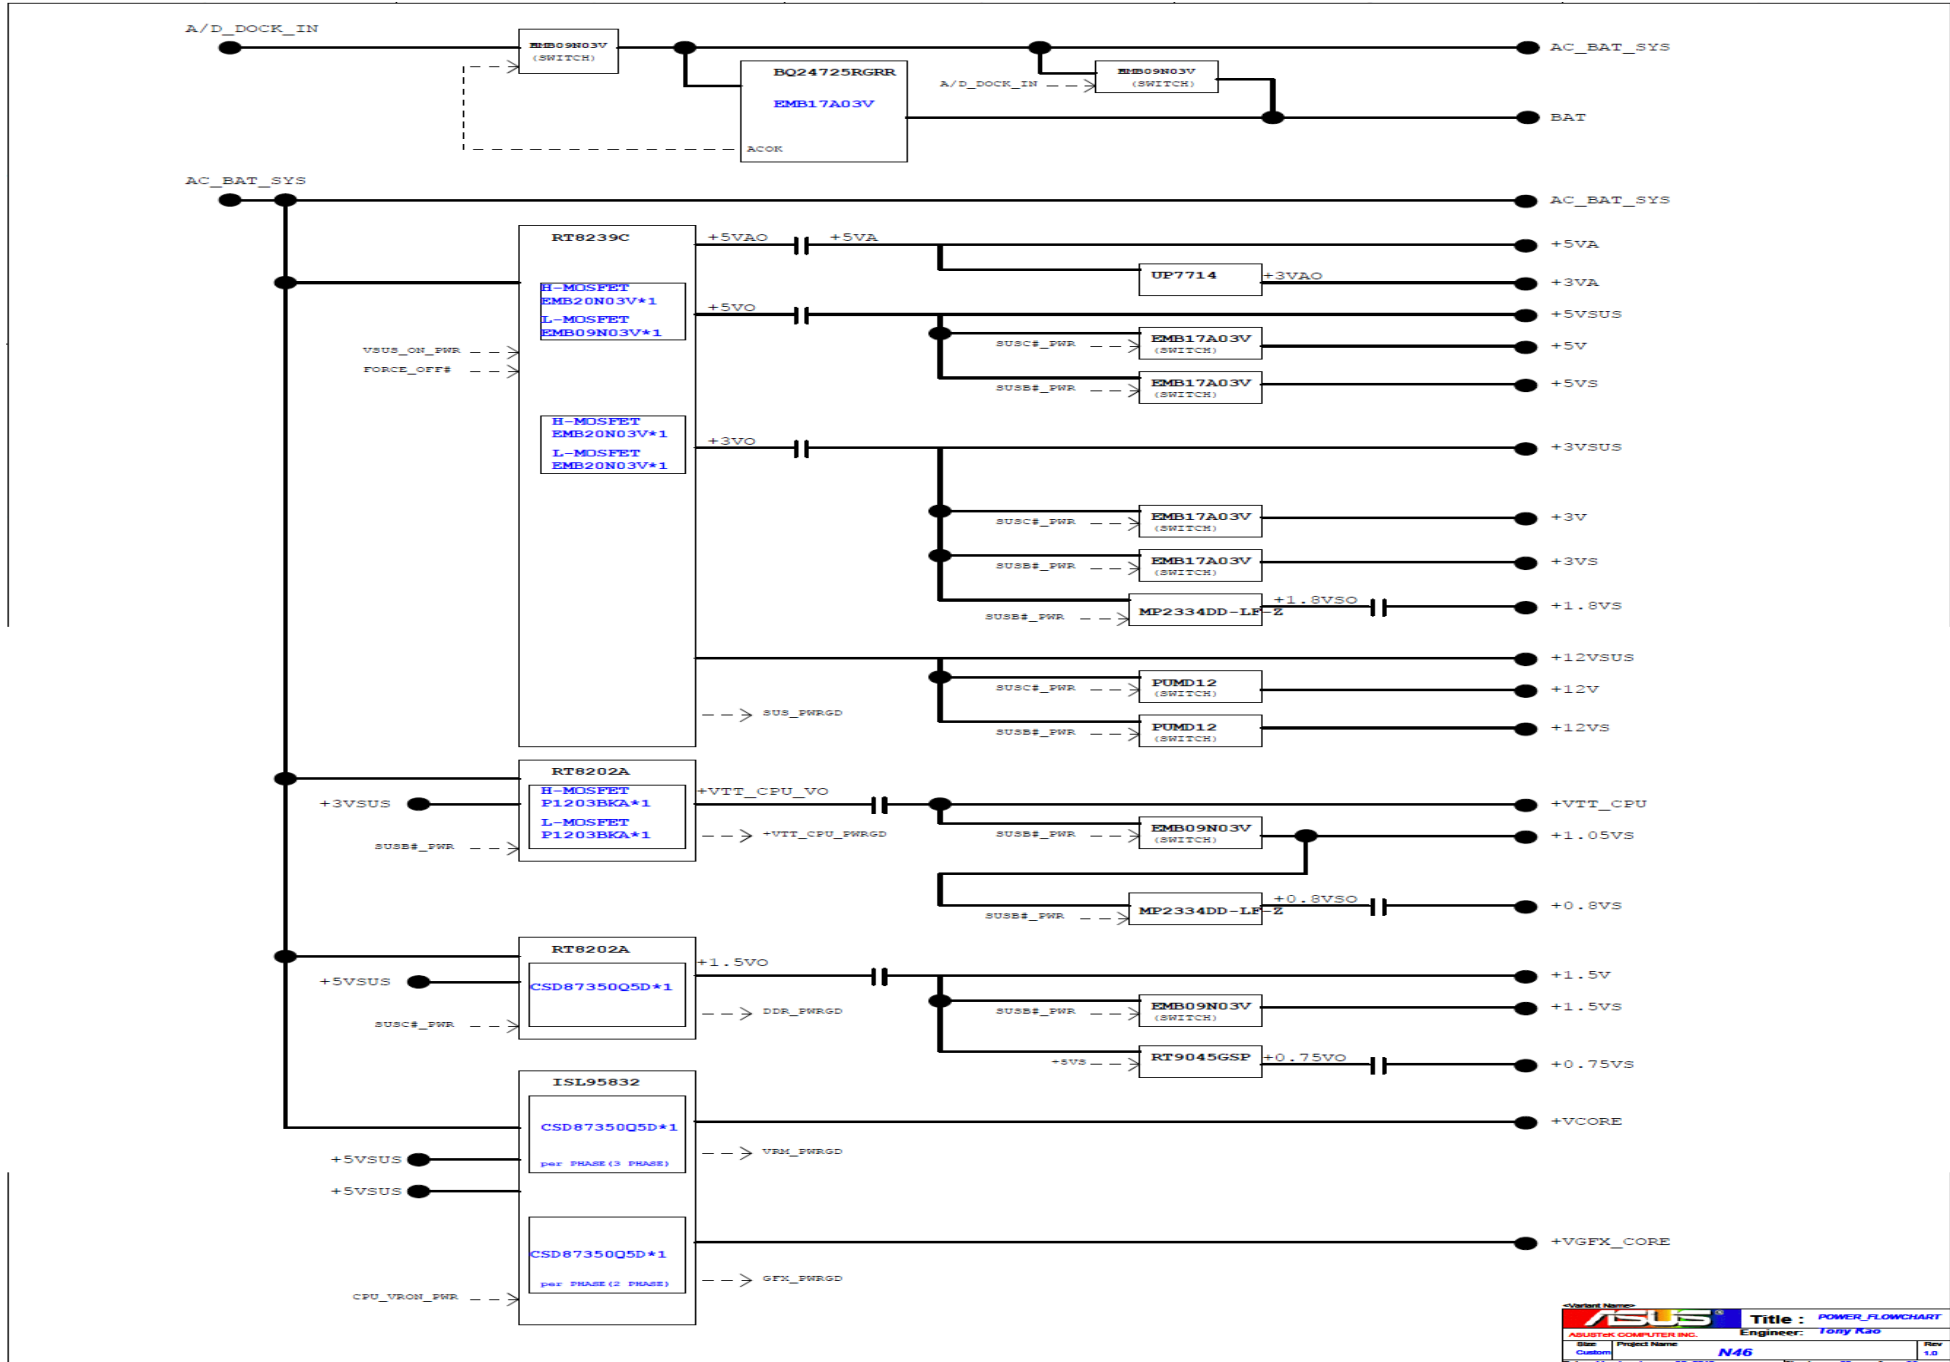

POWER ON SEQUENCE

U53 Power On Sequence Diagram Rev.0.14

AC-IN Mode

