


# K54HR Repair Guide

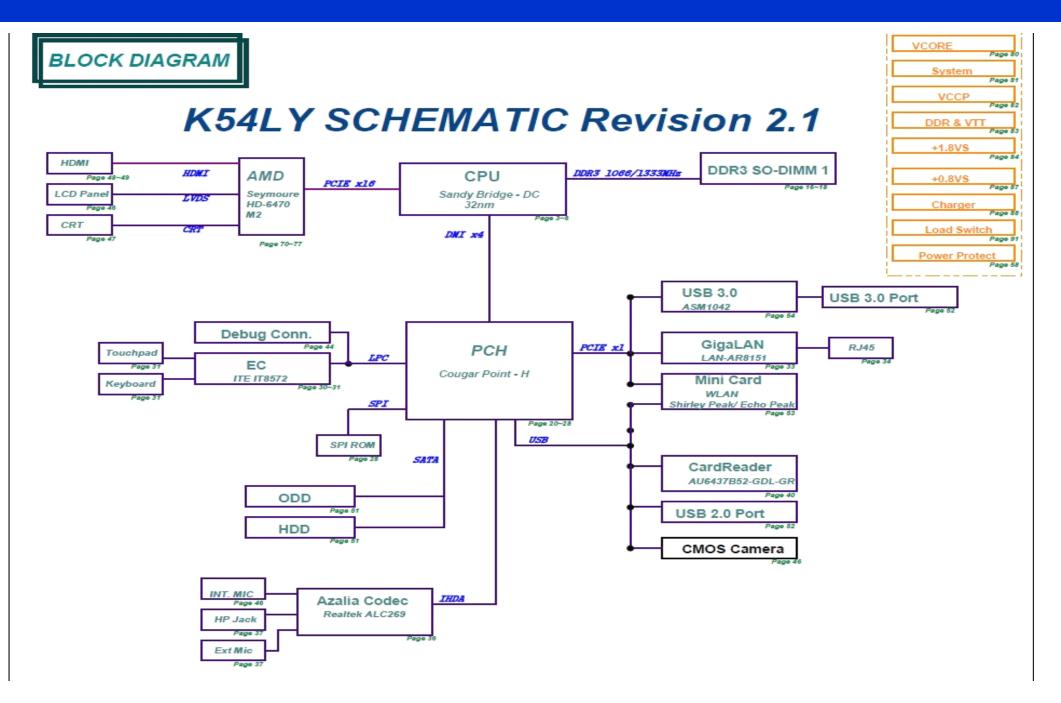


### **POWER FLOW**

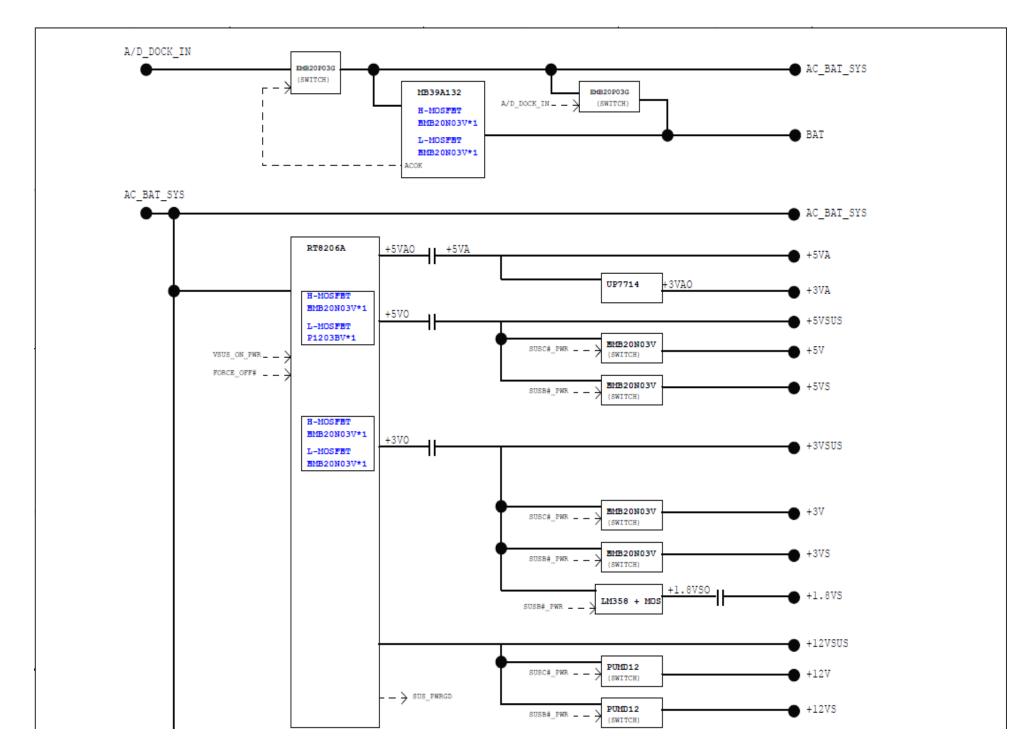


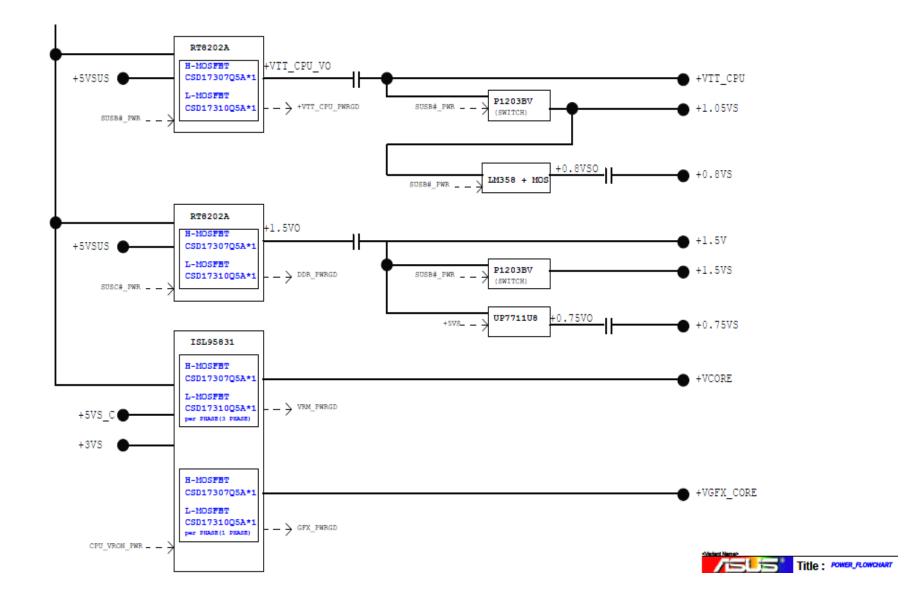

# **POWER ON SEQUENCE**

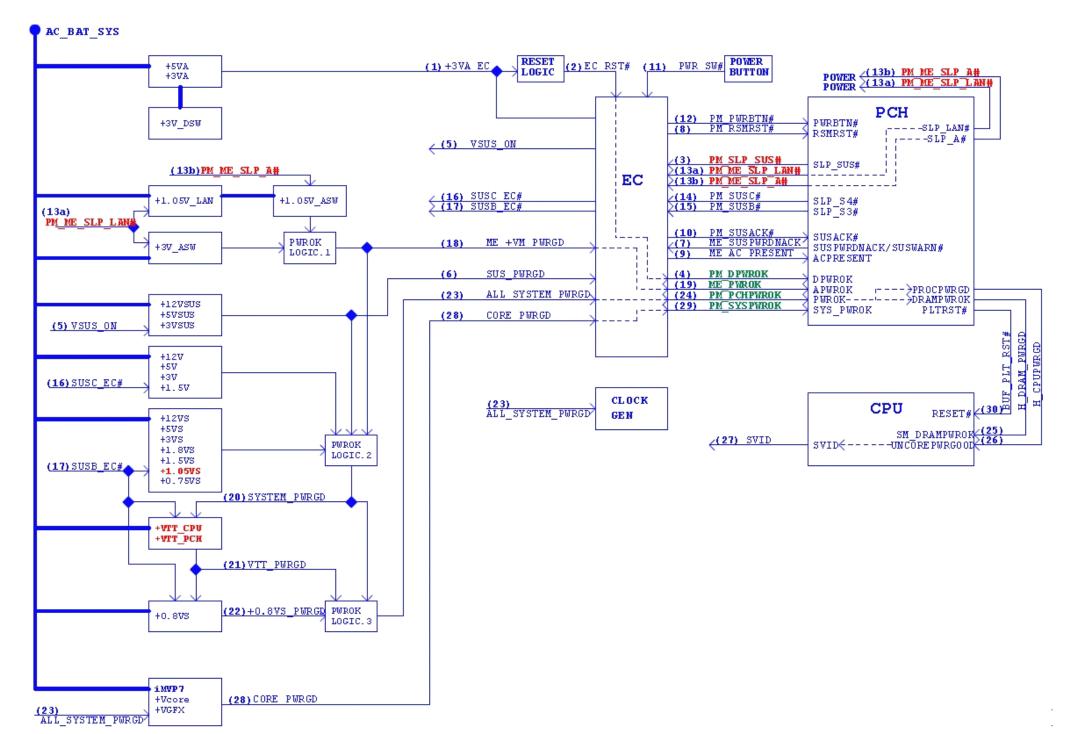

## **Voltage& Signal Measure Point TOP**

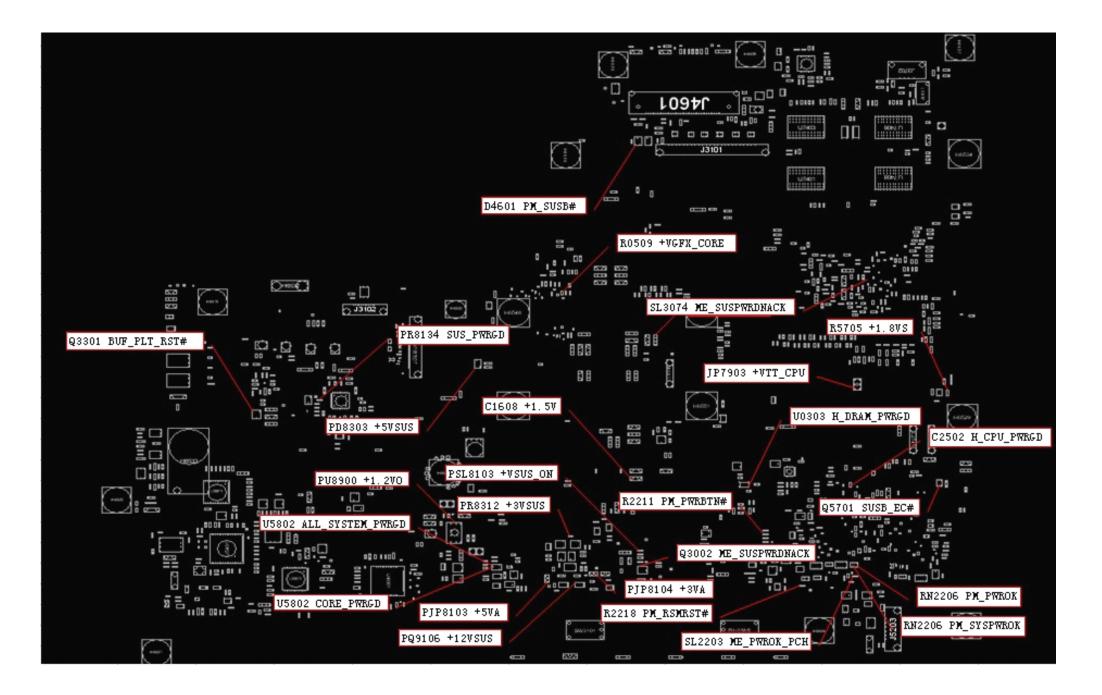

#### **Voltage& Signal Measure Point Bottom**

