



N55SL Repair Guide

N55SL Block Diagram

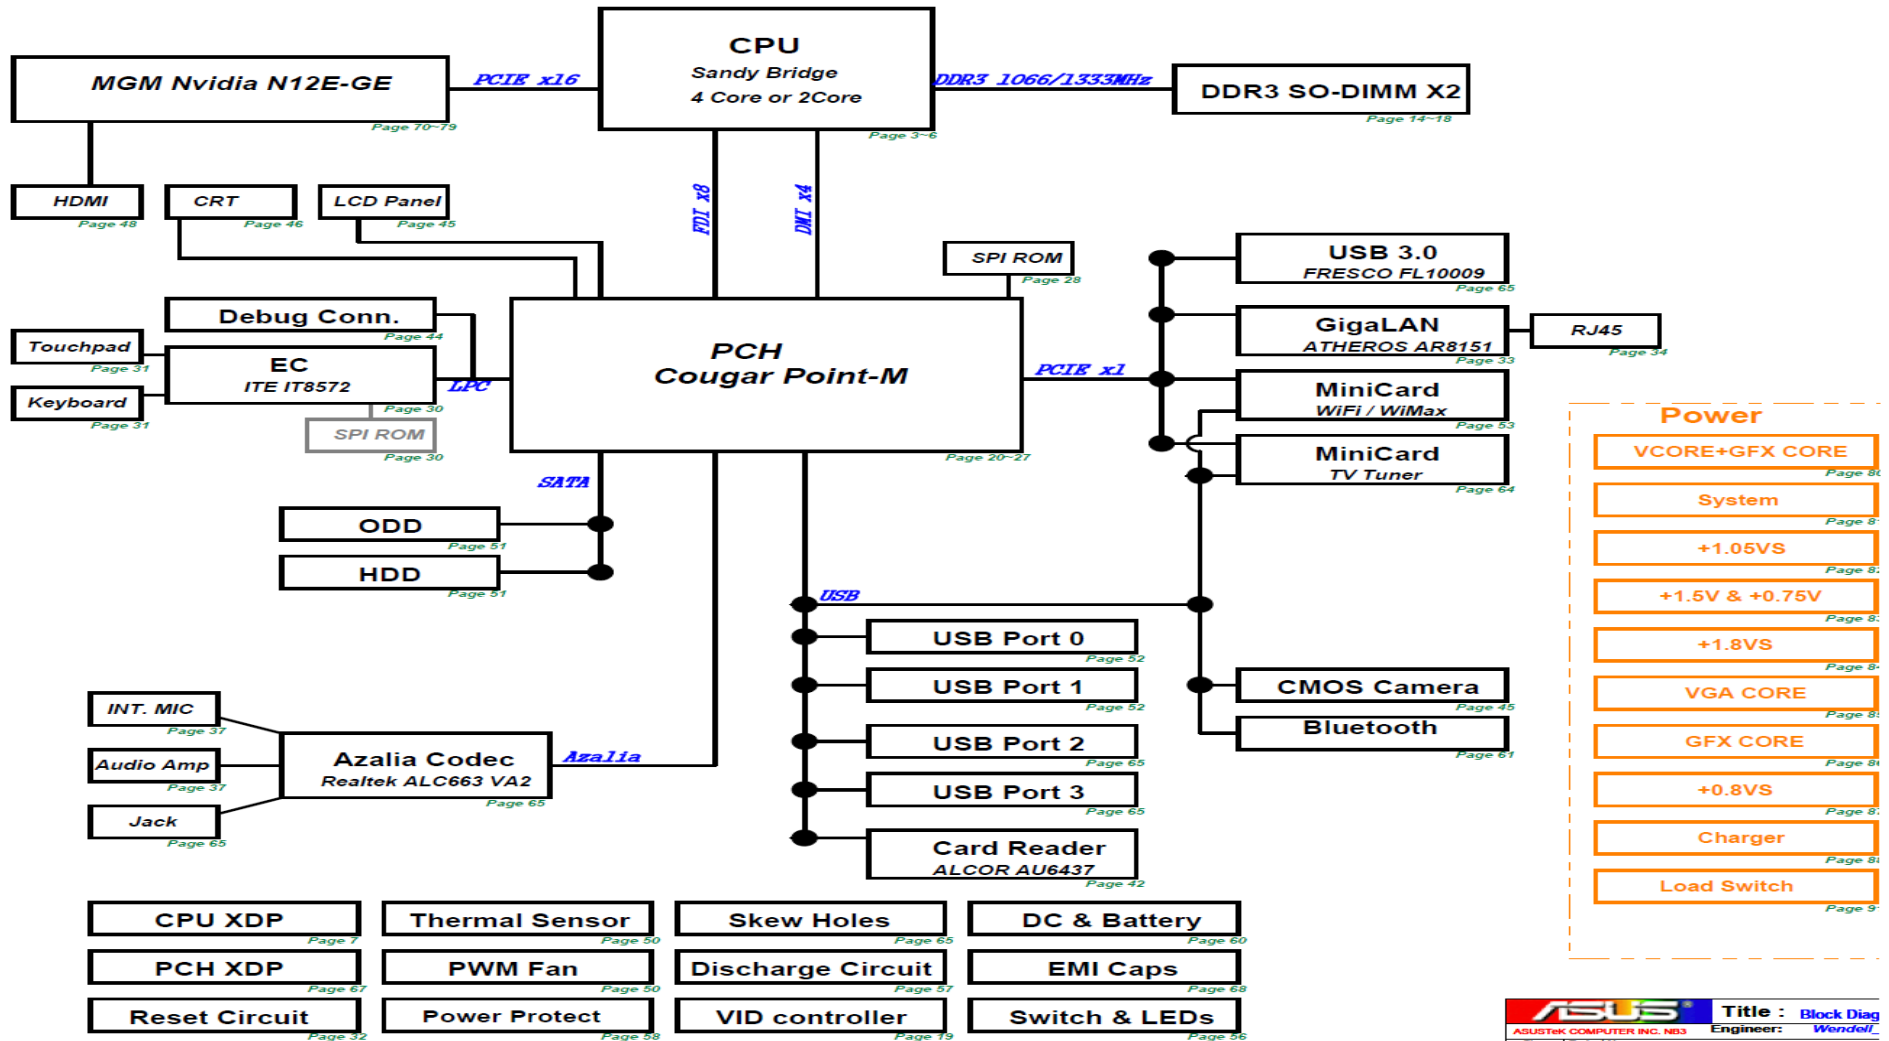


POWER FLOW

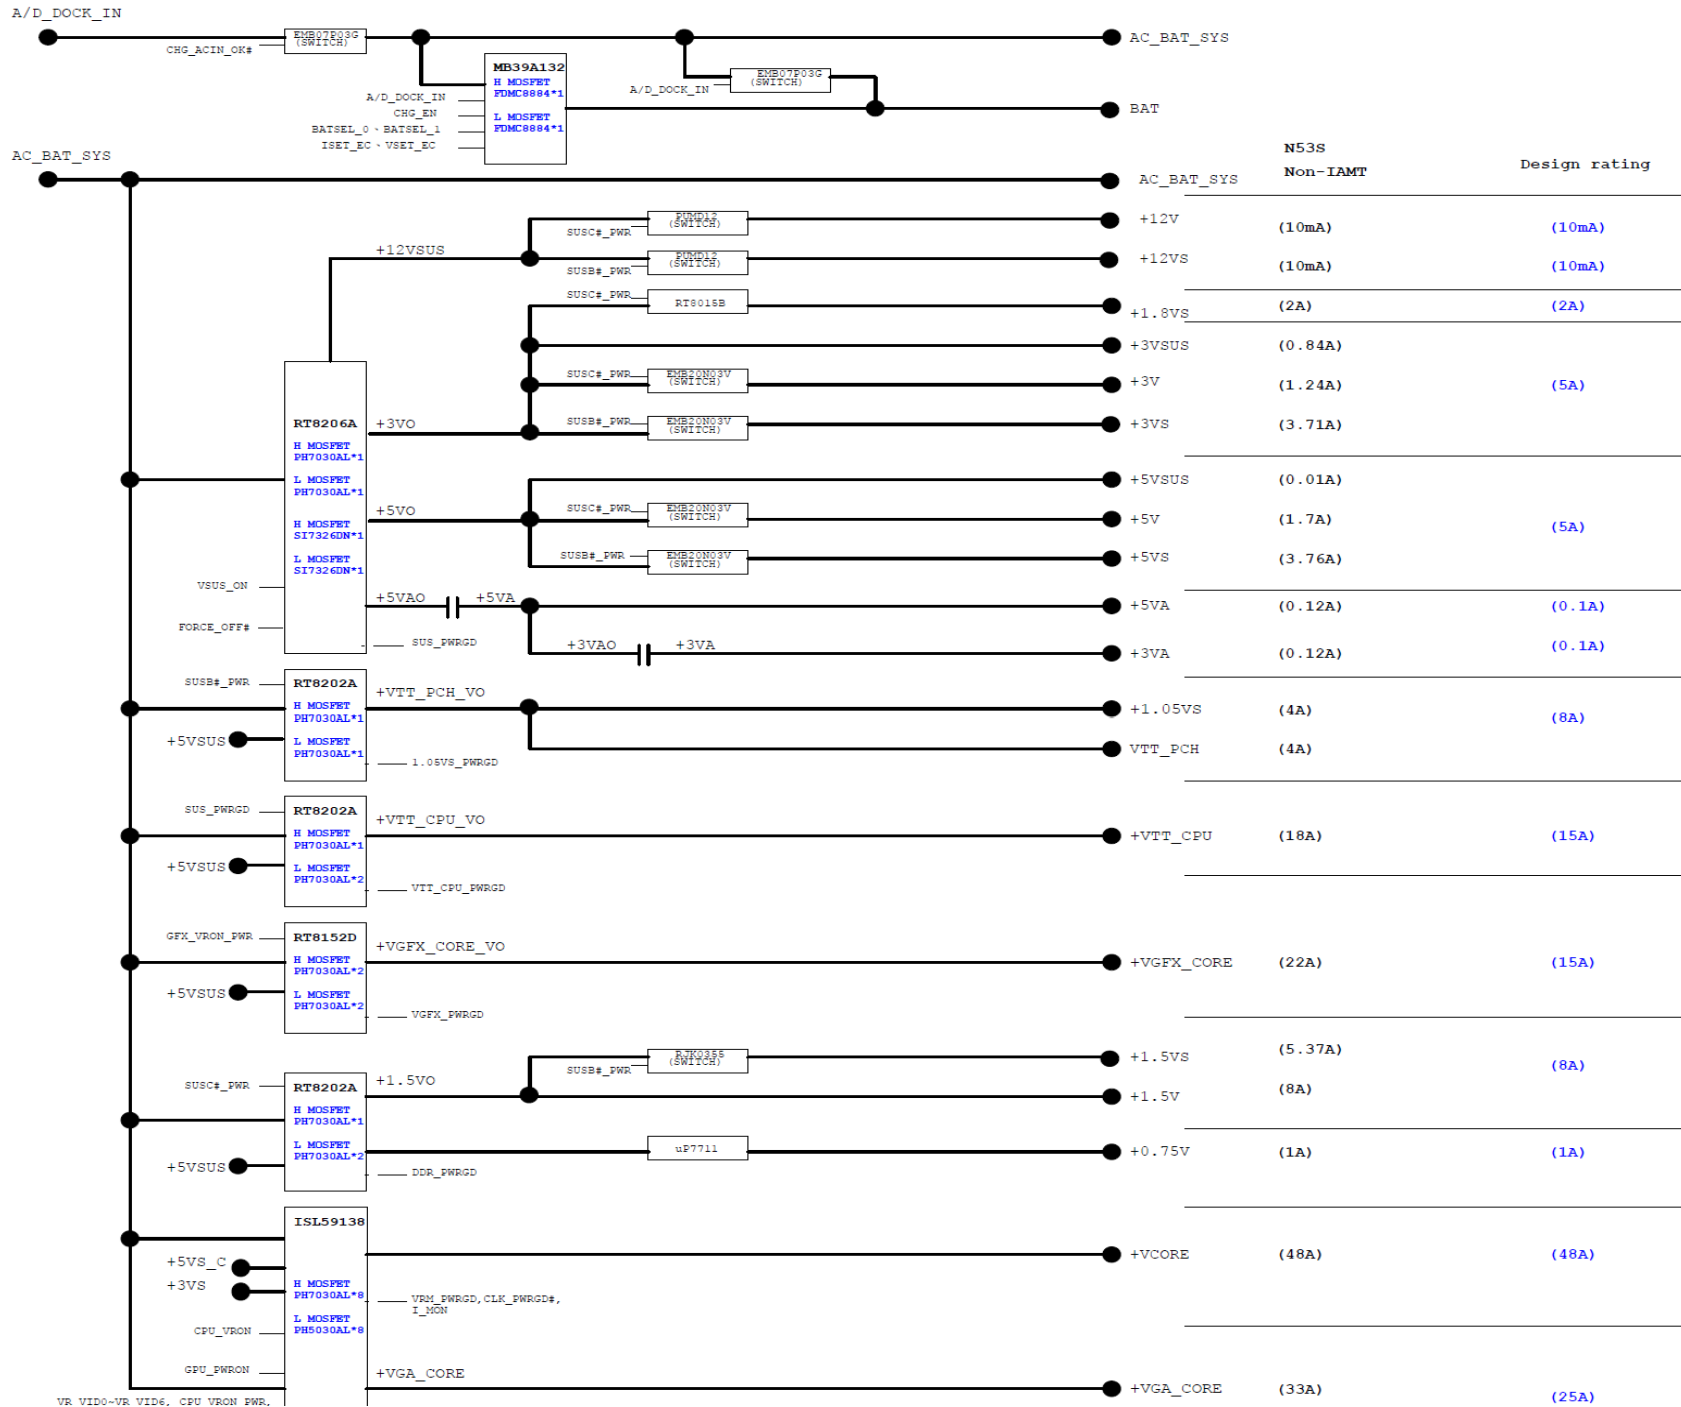


POWER ON SEQUENCE

U53 Power On Sequence Diagram Rev.0.14


AC-IN Mode

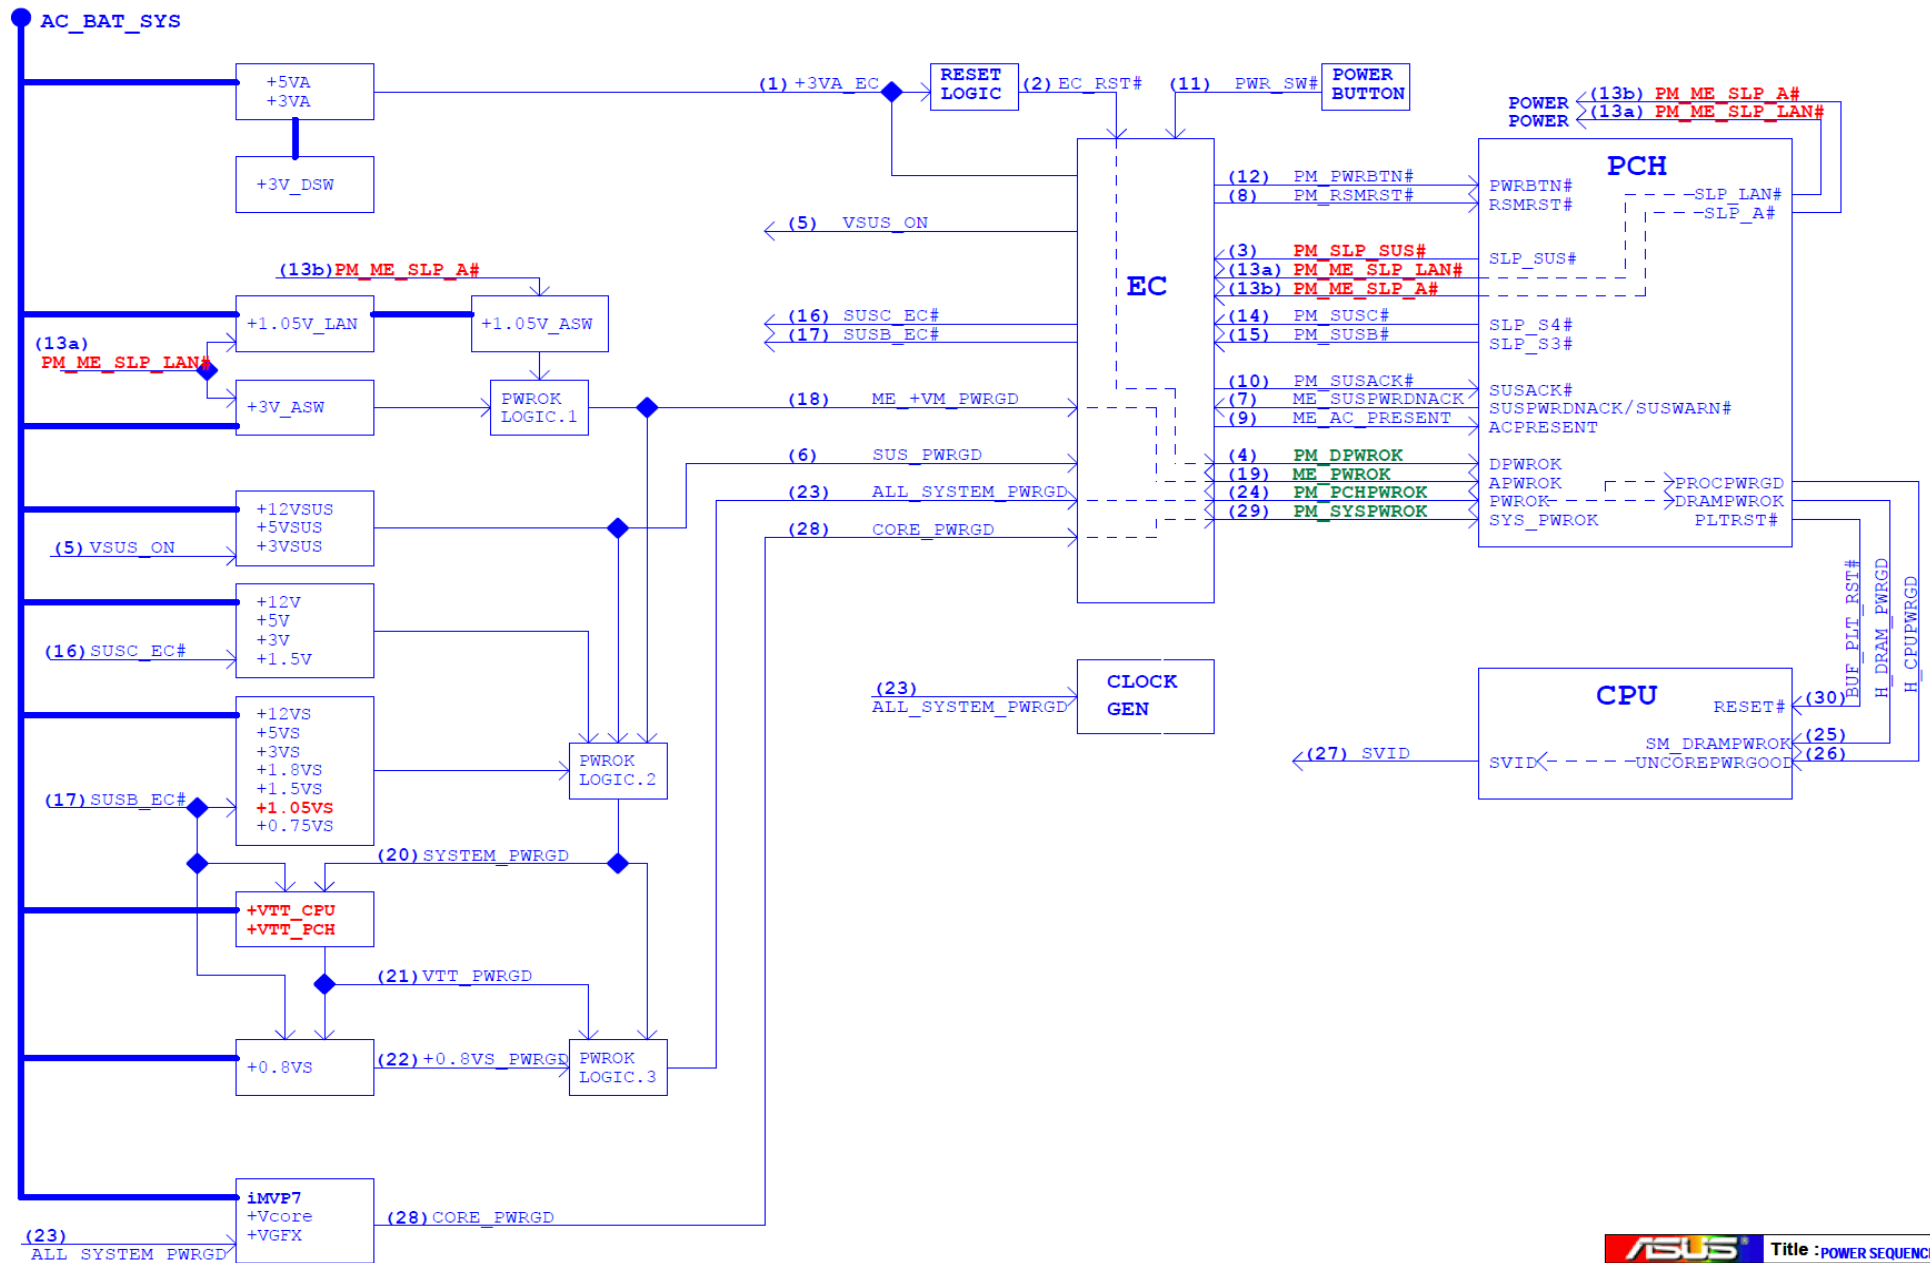

Voltage & Signal Measure Point TOP

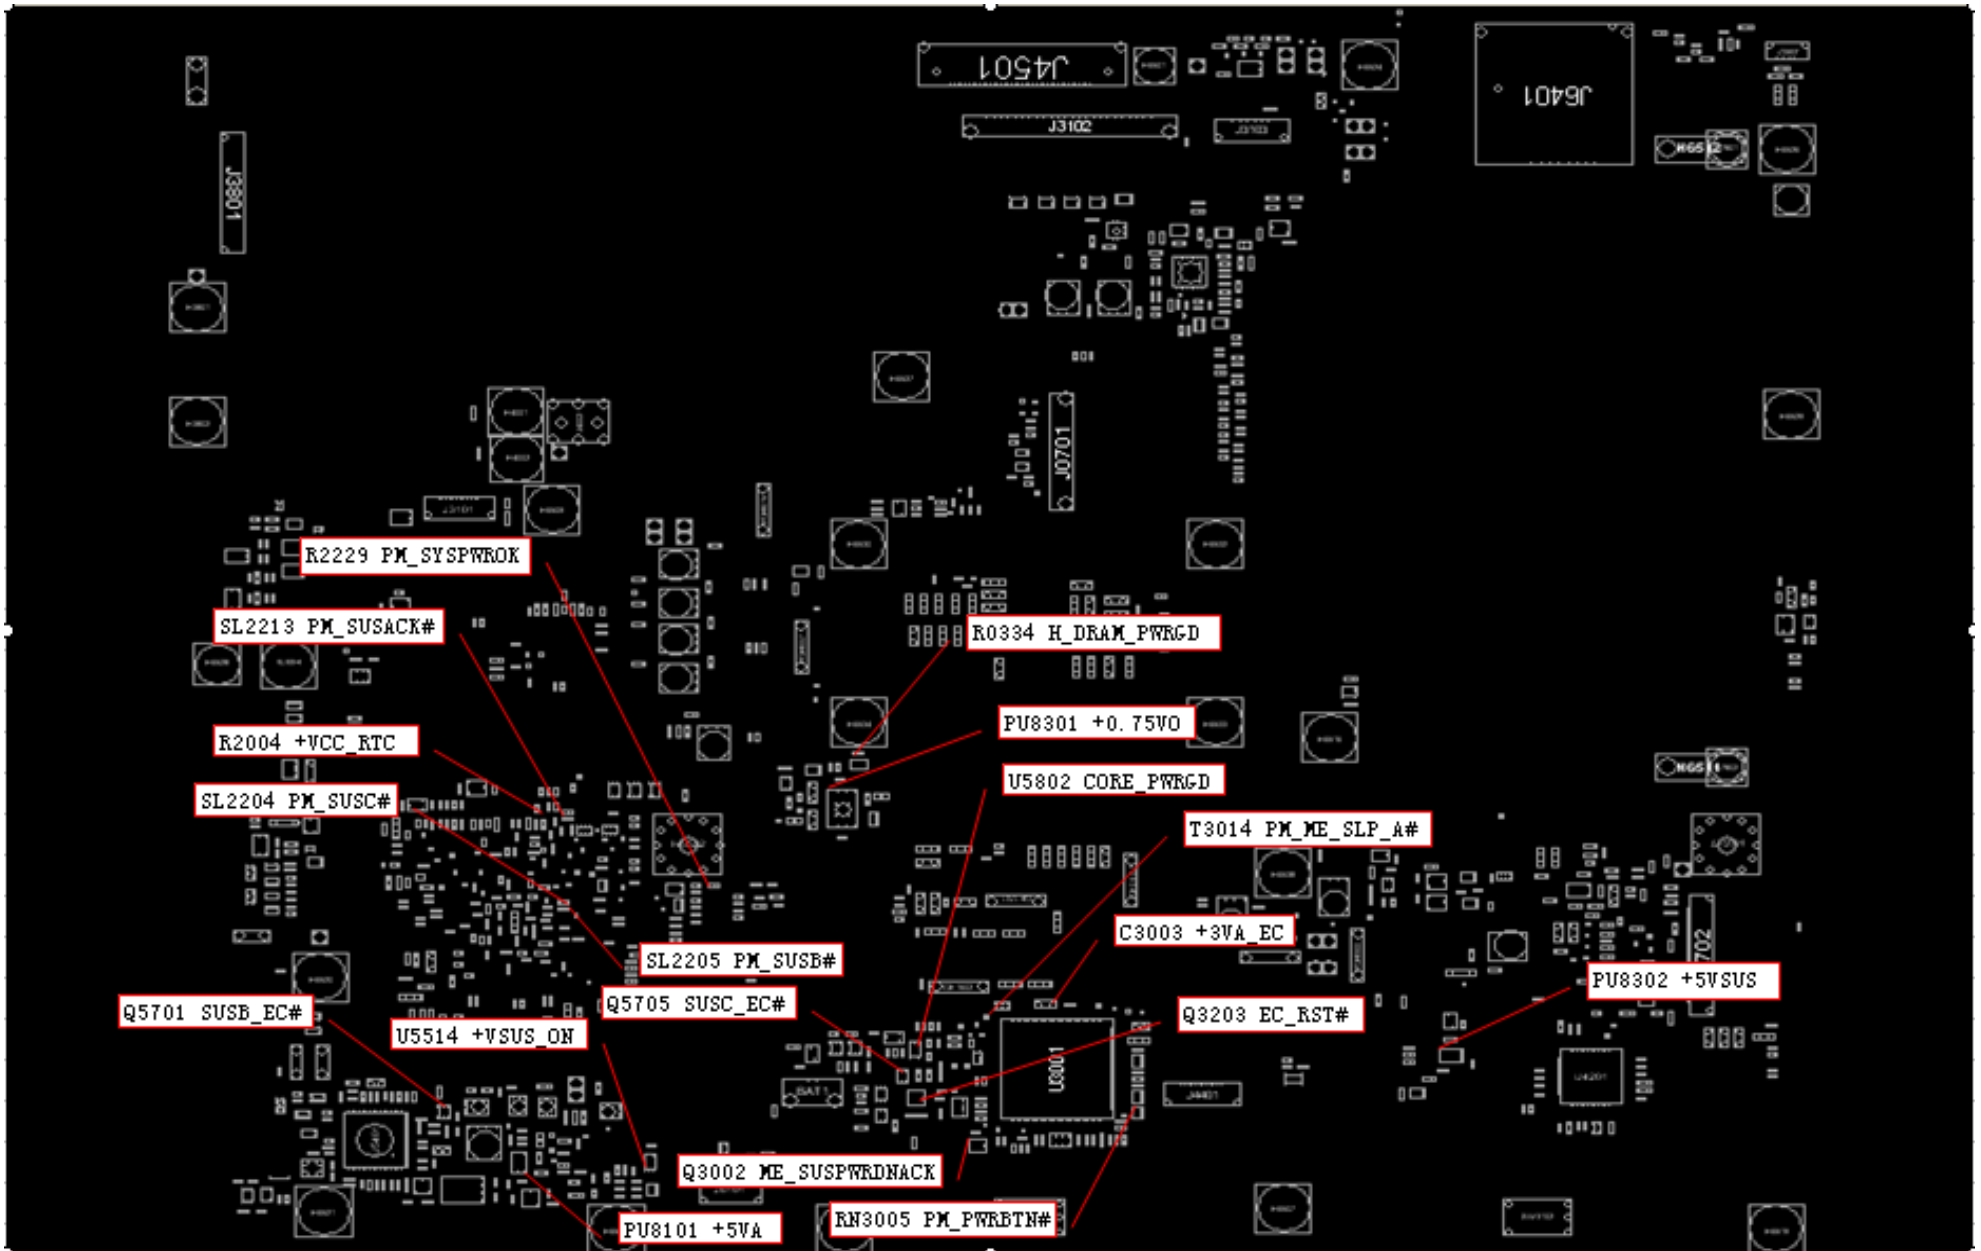

Voltage & Signal Measure Point Bottom

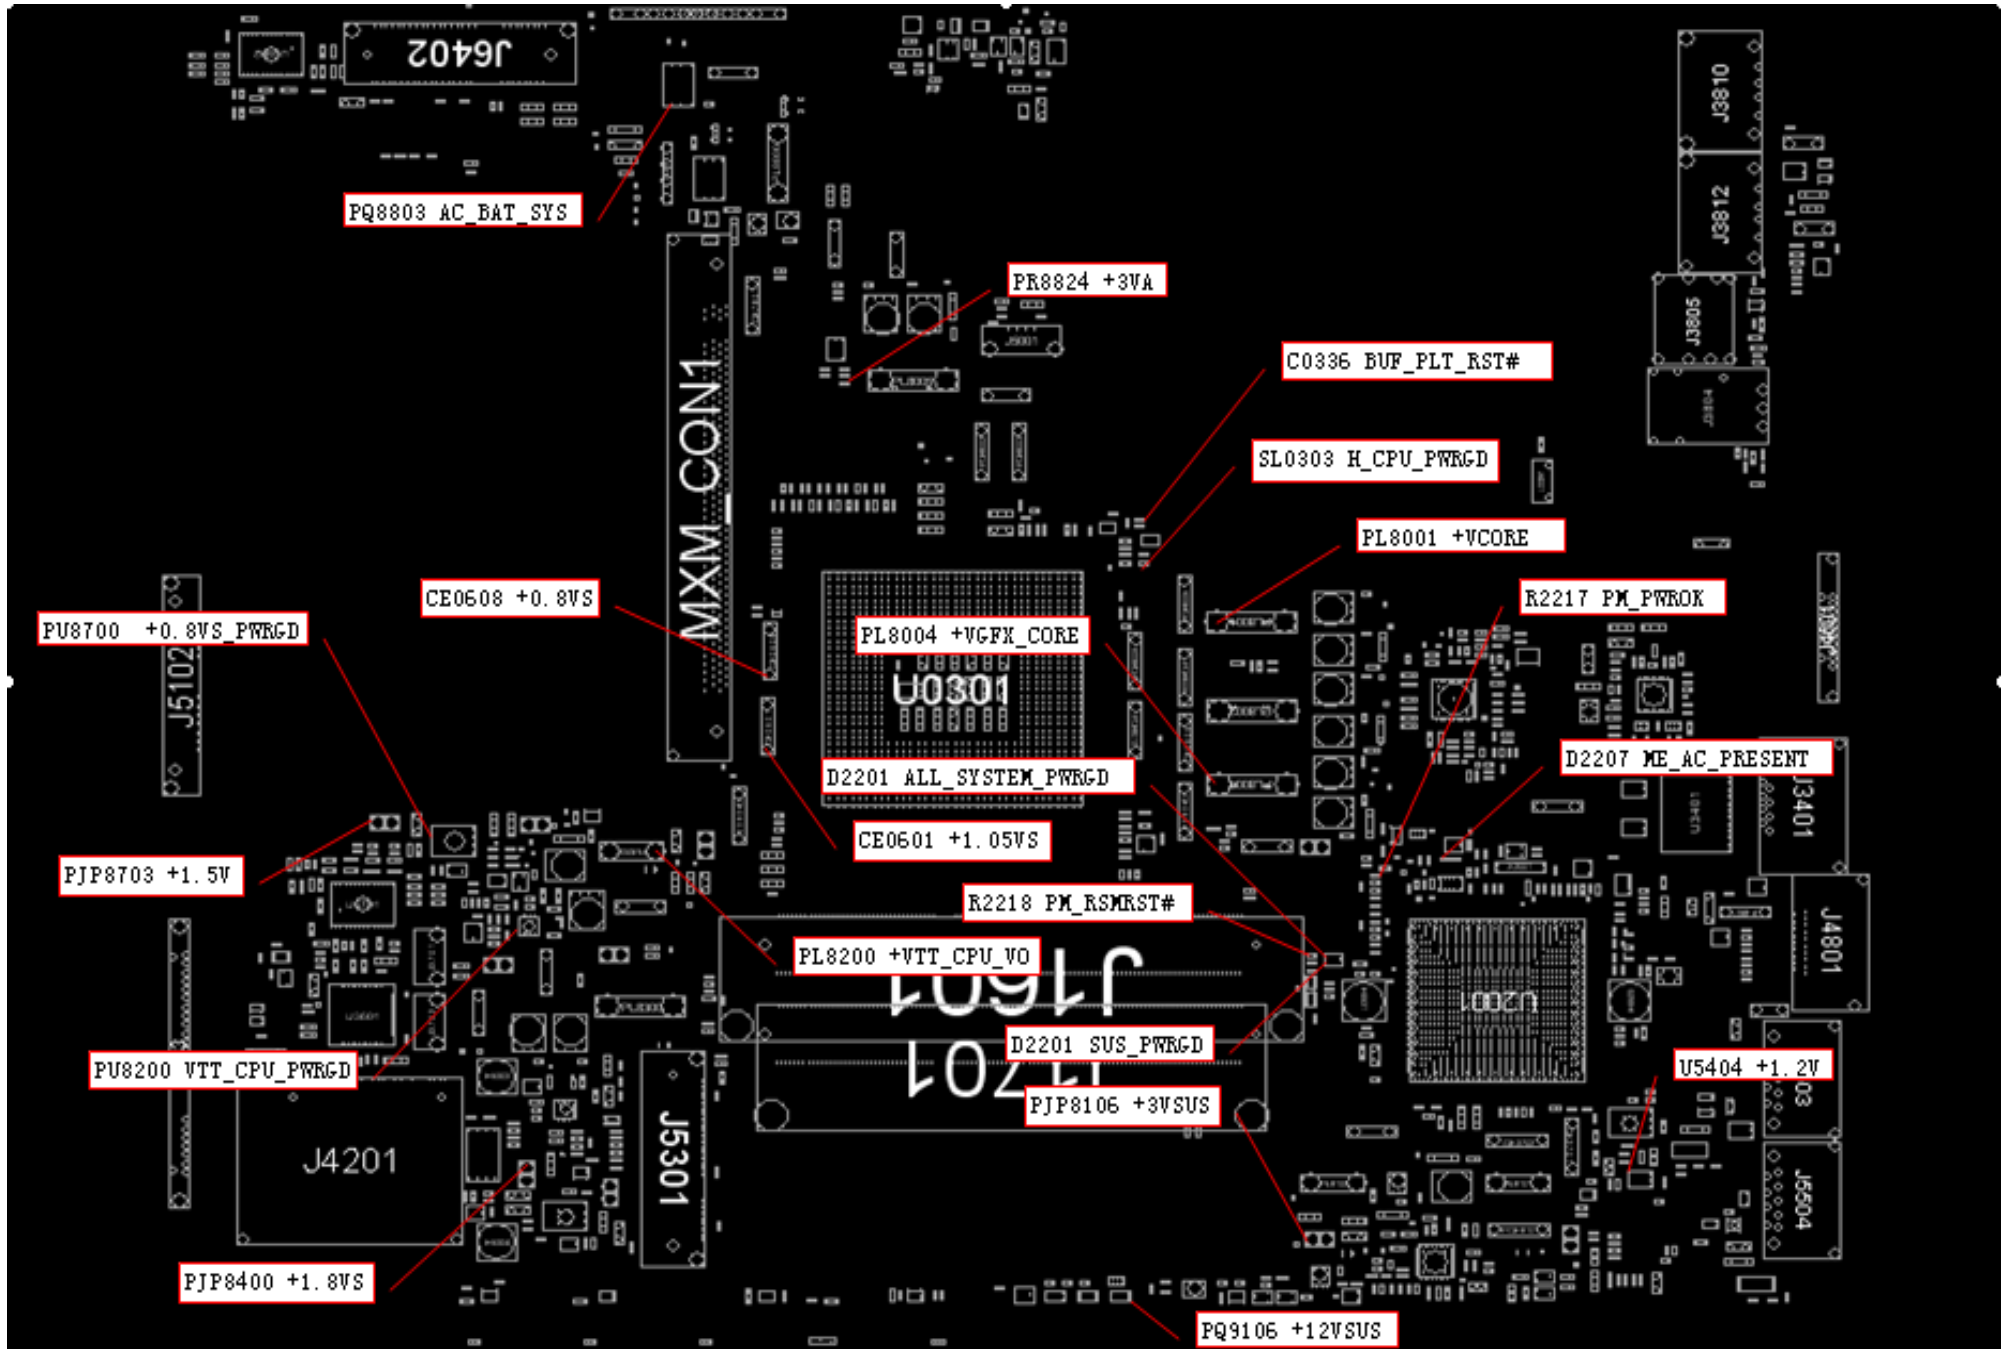

www.s-manuals.com